




PowerPad15C

USER GUIDE

Contents

1	PowerPad15C at a glance	4
2	Getting Started	5
3	Charging without connecting to a host computer	5
4	Using when connected to a host computer	5
4.1	Charging	5
5	Manage Ports & Devices using Cambrionix Software	6
5.1	LiveViewer	6
5.2	Command Line Instructions (CLI)	7
5.3	Cambrionix API	8
6	Specifications	9
7	Certifications	9
8	Safety Guidelines and Precautions	9

1 PowerPad15C at a glance

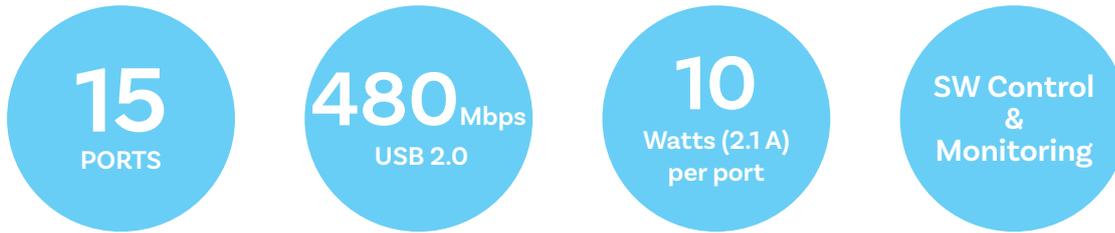

The PowerPad15C has been designed primarily for desktop use, being highly compact and quiet. It provides 10 Watts of charging power to each of its 15 USB2.0 ports, allowing mobile devices to be charged quickly, safely and reliably. All ports can be controlled using Cambrionix software to allow charging and/or data transfer while monitoring important port and device information.

The PowerPad15C can charge attached USB devices without using a local computer and our intelligent charging algorithm allows almost any device to be charged at its optimum rate (up to 2.1A per port). The firmware can be up-dated to allow new charging profiles to be added, ensuring the PowerPad15C can charge the latest devices.

The PowerPad15C is supplied with an external power supply to minimize its desktop footprint. It is ready to charge out-of-the-box and to sync devices when attached to a host computer.

When a local (host) computer is attached, the host can control operation of the ports using freely available software.

Device charging and synchronisation can be monitored through Cambrionix's LiveViewer App, the Application Programming Interface (API) or Command Line Interface (CLI). Cambrionix's free monitoring and control software can be downloaded from

(<https://www.cambrionix.com/software>).

What's included

These items are required to use your PowerPad15C and are included in the box:

- The PowerPad15C unit (see Figure 1 below)
- A 180W Power Supply Unit (PSU)
- A mains cable appropriate for the country of use

Optional High-Speed Type-A to Type-A USB2.0 cables are available to purchase separately.

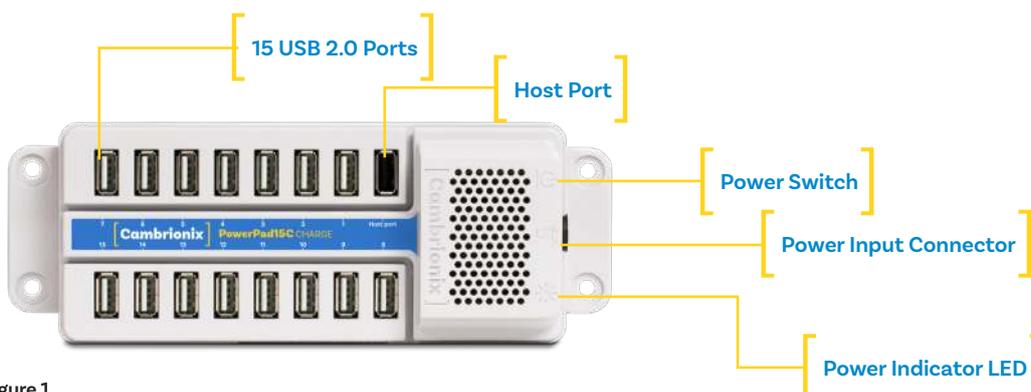


Figure 1
PowerPad15C
connections

2 Getting Started

2.1 Getting Started

Everything you need to get your USB hub up and running can be found on our website.

Visit <https://www.cambrionix.com/help> for all the getting started information you need including our software, user guides or raise a support ticket.

2.2 Connecting to the mains

Connect the Power Supply Unit (PSU) to the PowerPad15C using the 4-pin DIN plug.

Connect the mains cable to the PSU. Making sure you adhere to local safety regulations, connect the mains cable to the 100 – 250 Vac mains power outlet and switch the PowerPad15C on using the small power switch located adjacent to the power input connector on the PowerPad15C. When the device is switched on, a red LED will be illuminated. The PowerPad15C is now ready to charge attached devices.

3 Charging without connecting to a host computer

When the PowerPad15C is switched on and is not connected to a local host computer it is automatically configured to charge devices using its intelligent charging algorithm. Simply connect the devices to be charged to any of the available 15 ports (not the Host Port) using USB3.0-compliant cables.

Once the devices are connected, the algorithm will detect the highest charge rate allowable for each attached device. Charging at the optimum rate (up to 2.1Amps) specified by the manufacturer will commence once profiling is complete. Depending on the state of charge of the device attached, this may take tens of seconds.

4 Using when connected to a host computer

4.1 Charging

When the PowerPad15C Host Port is connected to a local computer (using a Type-A to Type-A USB2.0 or higher compliant cable), charging will proceed as described in 3 above.

However, you can now use one of Cambrionix's programmes to manage each port individually.

5 Manage Ports & Devices using Cambrionix Software

More productivity, saving you time.

Cambrionix provides three interfaces to monitor and manage your hub:

- [LiveViewer](#)
- [Cambrionix API](#)
- [Command Line Instructions](#)

5.1 LiveViewer

LiveViewer is a simple app-based management of your devices and USB hub. It's available to download free from our website:

<https://www.cambrionix.com/liveviewer>.

It enables you to monitor and manage ports and all the devices individually or together:

Device and Port Control

Control and monitor power and data to every downstream port. Easily switch between modes (Charge/Sync/Off).

Charging Profiles

Adapt and change charging profiles per port or the whole USB hub.

Battery Health

Check battery health and device charging performance.

Battery Capacity

Check devices battery capacity to receive and hold a charge.

Monitor

Monitor speed of control and easily switch between charge and sync.

Numbers

Check mobile devices IMEI, OS version, manufacturer and more.

Charge Information

Duration. How long the device has been attached

End time. Time the battery reaches a threshold (full) level

Current. Instantaneous charge current in mA)

Energy. Present energy rate in Wh)

Hub health information

In addition to individual port information and control, LiveViewer displays the TS3-16 rail voltages, time since switched on, total instantaneous current and power, and temperature.

Updating your USB hub

Firmware and software updates - automatically.

As part of delivering an easy user experience our LiveViewer application is now a set-and-forget solution.

The LiveViewer application will find out what software your USB hub has and present an update for you, ready to just hit install.

This now makes keeping your USB up-to-date even easier.

5.2 Command Line Instructions (CLI)

Command Line Instructions can also be used to control and monitor the functions of the PowerPad15C and attached devices over a VCP (Virtual COM Port). In order to use the command line interface a serial terminal emulator must be installed on the host computer.

Examples include Serial, ZTerm, PuTTY, and Minicom. Once you have installed your preferred terminal emulator, please connect to the device COM port using 115,200 baud, 8 data bits, No Parity, 1 Stop Bit. Once you get a command prompt, type “help” for a list of commands and their usage, as shown below:

Command	Action
mode <m> [p]	Set mode <m> for port [p] or all ports
mode c <p> [cp]	Set charge mode for a port <p> with optional profile [cp] to enter immediately
state [p]	Show state for port [p] or all ports
system	Show hardware and firmware information
health	Show voltages, temperature, errors and boot flag
cef	Clear error flags
sef [flags]...	Set error flags
crf	Clear rebooted flag
limits	Show voltage and temperature limits
list_profiles	List all profiles on system
en_profile <i> <1 0>	Enable (1) or disable (0) profile <i>
set_profiles <p> [l]	Set profiles <l> associated with port <p>
get_profiles <p>	List profiles associated with port <p>
sec [arm disarm]	Set or reveal security mode
host [auto manual]	Show if USB host is present, and set mode change
id	Show id string
bd	Board description
logc <s>	Report mA for each port every <s> seconds
loge [s]	Report state for all ports every [s] seconds and events as they occur
l	Live view (periodically updated screen showing system state)
remote [exit kexit]	Enter or exit mode where console is controlled by terminal
ledb <p> <row> <ptn>	Set individual LED on row <row>, port <p> to flash bit pattern <ptn>
leds <row> [ptnstr]	Set flash pattern of a string of LEDs on row <row> to string <ptnstr>
keys	Read key click event flags
lcd <row> <col> <str>	Write string <s> to LCD at row <row>, column <col>
clcd	Clear LCD
beep [ms]	Make console beep for [ms] milliseconds
cls	Clear terminal screen
reboot [watchdog]	Reboot (optionally by using watchdog timeout)
serial_speed [test fast slow]	Change serial interface speed
set_delays	Change internal delays
host [auto/manual/charge/sync/off]	Show if USB host is present, and set mode change

NOTES:	
[p] is port number.	Range 1...16. Omit for 'all'
<m> is port mode:	c=Charge, s=Sync, o=Off, b=Biased
<l> is a list of profile IDs.	Blank to use all profiles.
<i> is a single profile ID.	
Parameters:	Optional parameters are shown in []. Compulsory in < >.
Tab key	Re-runs previous command.
Cursor up	recalls last command.

Typing “l” will give equivalent information to LiveViewer and, using the command “logc X”, will output the data to a log file every “X” seconds.

This allows live data to be captured in an Excel file for storage. To return to the prompt at any time, please type “q”.

5.3 **Cambrionix API**

The new API has been built from the ground up and is fully JSON-RPC compliant. It's been designed to perform and provides a solid platform for future application development and has these features.

Cambrionix API allows you to monitor and control each port in more detail and to integrate these functions into your own workflow processes.

The API comprises a daemon that can be downloaded from <https://www.cambrionix.com/api> and installed on the host machine.

Port information and control can be provided through the API. Use Node.JS or any other web technology to access information from the API using WebSockets.

Object Notation (JSON) Remote Procedure Calls (RPC) over TCP. JSON-RPC calls send a request to the API to "Get" port, device or hub information, or "Set" port functions (such as mode).

A library of sample Python code is supplied to help you integrate many of these functions into your process workflow alongside the full Reference User Guide available.

6 Specifications

PowerPad15C

Input Voltage:	12Vdc
Input Current:	15A
Input Connection:	4-pin DIN
Output Voltage:	5.2V
Output Current:	2.1A Max per Port
Output Power:	10W Max per Port
Output Power (Total):	163.8W Maximum

Input/Output Connectors:	16 x USB Type-A, 1 x 4-pin DIN
Ambient Operating Temperature Range:	0 ~ 35°C
Relative humidity:	5% to 95% non-condensing
Dimensions (approx.):	198.4 long x 73 wide x 40 high mm
Approximate weight:	1.6 kg (inc PSU)

Power Supply

Input Voltage:	100-250Vdc
Input Current:	2.5A @ 115 Vac
Input Frequency:	50-60Hz
Input Connector:	C14
Output Voltage:	12Vdc
Output Current:	15A
Output Power:	180W
Output Connector:	4-pin DIN

7 Certifications

- Independently safety tested by the Underwriters Laboratory (UL) under file #E346549
- CE Tested and marked
- CB Certificate
- FCC Part 15 Tested and marked
- RoHS Compliant
- China CCC certification
- Complies with the latest EN62368 safety requirements for ITE
- Housed within a UL94-V0 specification fire enclosure

9 Safety Guidelines and Precautions

Please read and understand these guidelines prior to installation or use.

The PowerPad15C has ESD, over-voltage, over-current and over-temperature protection. However, to use the equipment safely you should follow all local regulations relating to the use of electrical equipment and note that:

- Failure to install and operate the equipment in accordance with all local and these safety guidelines may result in unit failure, electrical shock and personal injury.
- The plug on the power cord is considered the “disconnect device” and consequently the mains outlet should be located near the TS2-16, easily accessible in case the power supply needs to be isolated from the mains power.
- If there is a liquid spillage over a ventilation slot, external data/power connector or product aperture, remove power from the unit without contacting the liquid immediately.

Important Electrical and Safety Messages

Safety warning	Potential consequence if ignored
Do not modify the product in any way.	Fire, electric shock or personal injury may occur.
Do not dismantle the product.	Fire, electric shock or personal injury may occur.
Do not bend, compress or drill into any part of the product.	Damage, electric shock or personal injury may occur.
Parts of Cambrionix products may become hot during operation. Do not obstruct air vents on the product or operate the product in an environment where the ambient temperature is outside the recommended operating temperature region.	An increased internal temperature may cause a fire.
Cambrionix products are not reverse-polarity protected. The power connections MUST be connected correctly. If in doubt, please contact Cambrionix.	Damage to your Cambrionix product may occur. A fire or electric shock may result.
Do not short circuit the Power Supply Unit (PSU) supplied with your Cambrionix product.	Sparks, fire or electric shock may result.
Ensure dust does not collect around the power plug pins or power socket, or in or around the air vents to the extent it causes a reduction in air circulation.	A fire may result if there is combustible material within the power socket or around the power plug, or if the internal temperature increases due to lack of air circulation.
Do not allow liquids to come into contact with the unit or power supply.	Fire, electric shock or personal injury may occur.
Keep the mains power socket (where the power cord is connected) unobstructed.	The power cord must be disconnected to cut off power to the product when an issue occurs. Note that the product may not be completely powered down by only using the power switch on the product.
Do not use a damaged power cord or plug, or a loose power socket.	An electric shock or fire may result.
Do not power multiple products from a single power socket.	Overheated power sockets may cause a fire.
Do not touch the power plug with wet hands.	An electric shock may result.
Insert the power plug all the way into the socket so that it is not loose.	An unsecured connection may cause a fire.
Connect the power plug to an earthed socket.	Failure to connect use an earthed socket may result in an electric shock or injury.
Do not bend or pull the power cord with force. Be careful not to leave the power cord underneath a heavy object.	Damage to the power cord may result in fire or electric shock.
Do not place the power cord near heat sources.	A fire or electric shock may result.
Only use the power cord provided (if applicable).	A fire or electric shock may result.
Only use the power supply provided with the product (if applicable).	A fire or electric shock may result.
Do not disconnect the power cord while the product is being used.	The product may become damaged by electric shock.
Cambrionix OEM modules are susceptible to Electrostatic Discharge (ESD). OEM modules should be handled in an ESD safe area.	Damage to your Cambrionix OEM module may occur.
There are sharp edges, corners and components. Suitable protective equipment must be worn during handling of Cambrionix OEM modules.	Personal injury may occur.
No power supply is shipped with a Cambrionix OEM module. Please contact your power supply manufacturer directly for safety related information.	Fire, electric shock or personal injury may occur. Please see the installation instructions for your Cambrionix product for correct wiring requirements.
When mounting a Cambrionix OEM module, all mounting holes should be used with appropriate spacers, screws and a torque level of 1.1Nm.	Damage or personal injury may occur.



This product can expose you to chemicals, including Nickel, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, go to www.p65Warnings.ca.gov

If in any doubt about how to correctly operate or maintain your Cambrionix system product or OEM module, or if any part of this safety document is unclear or confusing, please do not use your product and contact Cambrionix before proceeding further.



Cambrionix Ltd

The Maurice Wilkes Building
Cowley Road
Cambridge CB4 0DS
United Kingdom

T +44 (0) 1223 755 520

E enquiries@cambrionix.com

W www.cambrionix.com