



# PowerPad15S



## USER GUIDE

# Contents

---

<b>1</b>	<b>PowerPad15S at a glance</b>	<b>3</b>
<b>2</b>	<b>Getting Started</b>	<b>4</b>
2.1	Registration	4
2.2	Connecting to the mains	4
<b>3</b>	<b>Charging without connecting to a host computer</b>	<b>4</b>
<b>4</b>	<b>Using when connected to a host computer</b>	<b>4</b>
4.1	Charging	4
4.2	Data Transfer	4
4.3	Scalability - Syncing more than 15 devices	5
<b>5</b>	<b>Manage Ports &amp; Devices using Cambrionix Software</b>	<b>6</b>
5.1	LiveViewer	6
5.2	Command Line Instructions (CLI)	7
5.3	Cambrionix API	8
<b>6</b>	<b>Advanced Usage</b>	<b>8</b>
6.1	Updating the PowerPad15S firmware	8
6.1.1	Update procedure for MacOS	8
6.1.2	Update procedure for Windows	8
6.1.3	Running Updater Instructions	8
<b>7</b>	<b>Specifications</b>	<b>9</b>
<b>8</b>	<b>Certifications</b>	<b>9</b>
<b>9</b>	<b>Safety Guidelines and Precautions</b>	<b>9</b>

## 1 PowerPad15S at a glance

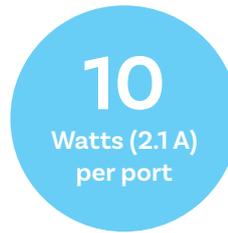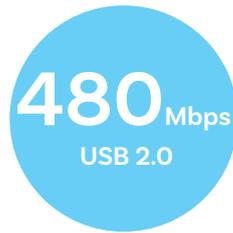

The PowerPad15S has been designed primarily for desktop use, being highly compact and quiet. It provides 10 Watts of charging power to each of its 15 USB2.0 ports, allowing mobile devices to be charged quickly, safely and reliably. All ports can be controlled using Cambrionix software to allow charging and/or data transfer while monitoring important port and device information.

The PowerPad15S can charge attached USB devices without using a local computer and our intelligent charging algorithm allows almost any device to be charged at its optimum rate (up to 2.1A per port). The firmware can be up-dated to allow new charging profiles to be added, ensuring the PowerPad15S can charge the latest devices.

The PowerPad15S is supplied with an external power supply to minimize its desktop footprint. It is ready to charge out-of-the-box and to sync devices when attached to a host computer.

When a local (host) computer is attached, the host can control operation of the ports using freely available software. Devices can be charged,

synchronised and monitored through Cambrionix's LiveViewer App, the Application Programming Interface (API) or Command Line Instructions. Cambrionix's free monitoring and control software can be downloaded from our website (<https://cambrionix.com>).


The PowerPad15S is fully compliant with High Speed USB2.0, allowing data transfer at up to 480Mbps when connected to a local computer. Multiple PowerPad15S can be connected to a single host computer to allow up to 85 USB2.0-compliant devices to be charged and synced simultaneously.

### What's included

These items are required to use your PowerPad15S and are included in the box:

- The PowerPad15S unit (see Figure 1 below)
- A 180W Power Supply Unit (PSU)
- A mains cable appropriate for the country of use

Optional High-Speed Type-A to Type-A USB2.0 cables are available to purchase separately.

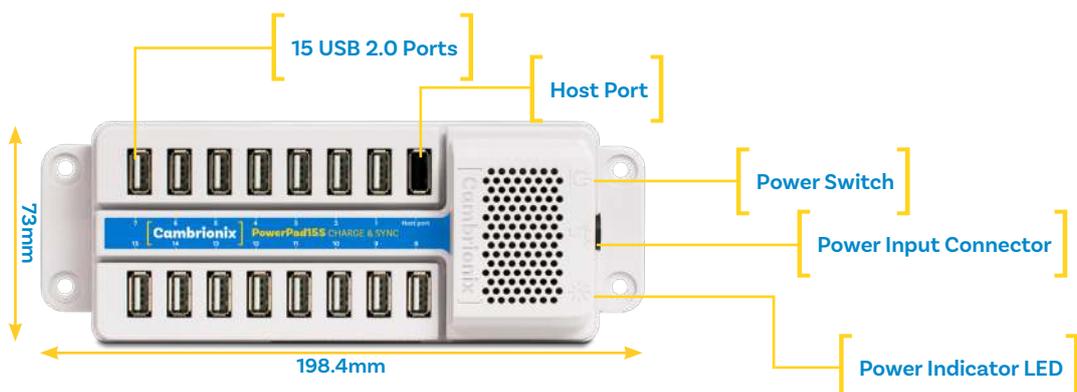

**Figure 1**  
PowerPad15S  
connections

## 2 Getting Started

---

### 2.1 Registration

You may register you and your product at <https://cambrionix.com> to download LiveViewer, our API and firmware updates.

### 2.2 Connecting to the mains

Connect the Power Supply Unit (PSU) to the PowerPad15S using the 4-pin DIN plug.

Connect the mains cable to the PSU. Making sure you adhere to local safety regulations, connect the mains cable to the 100 - 250 Vac mains power outlet and switch the PowerPad15S on using the small power switch located adjacent to the power input connector on the PowerPad15S. When the device is switched on, a red LED will be illuminated. The PowerPad15S is now ready to charge attached devices.

## 3 Charging without connecting to a host computer

---

When the PowerPad15S is switched on and is not connected to a local host computer it is automatically configured to charge devices using its intelligent charging algorithm. Simply connect the devices to be charged to any of the available 15 ports (not the Host Port) using USB3.0-compliant cables.

Once the devices are connected, the algorithm will detect the highest charge rate allowable for each attached device. Charging at the optimum rate (up to 2.1Amps) specified by the manufacturer will commence once profiling is complete. Depending on the state of charge of the device attached, this may take tens of seconds.

## 4 Using when connected to a host computer

---

### 4.1 Charging

When the PowerPad15S Host Port is connected to a local computer, the PowerPad15S defaults to Sync mode and charge currents are determined according to USB Implementers Forum (USB-IF) High Speed USB2.0 specifications. If the attached device complies with USB-IF Battery Charging specification BC1.2 and supports Charging Downstream Port (CDP), the PowerPad15S can provide high-speed charging at up to 1.5 A. If the connected device does not comply with BC1.2, the charge current will be limited to 500 mA in compliance with USB specifications.

If higher charge rates are required to sync Apple products (only), Cambrionix's ChaSync+ programme allows up to 2.1A to be provided. This programme can be downloaded from <https://cambrionix.com>. Before ChaSync+ can provide 2.1A the NVRAM settings of the PowerPad15S must be changed.

Please contact [support@cambrionix.com](mailto:support@cambrionix.com) for information and advice on how to do this.

### 4.2 Data Transfer

If you wish to transfer data, change applications, restore or update your mobile device, a data connection to a local host computer is required. The PowerPad15S works independently to the Operating System (OS) and data transfer can be performed to all common mobile operating systems, such as iOS, Android, Chromebook and Microsoft. In order to transfer data, connect the host port to your local (host) computer using a Type-A to Type-A USB2.0 (or higher) compliant cable. Any devices connected to the PowerPad15S will now appear as if they were connected to the host computer's USB port. The PowerPad15S is fully compliant with High Speed USB2.0 and supports data transfer at speeds up to 480Mbps. The red power LED may flicker when the PowerPad15S is syncing to indicate internal processor activity.

You can now use the programme of your choice to transfer data to and from your device. If the attached device has a BC1.2 compliant CDP port, the device can draw up to 1.5A while transferring data.

### 4.3 Scalability - Syncing more than 15 devices


If you wish to synchronise more than 15 devices, multiple PowerPad15S can be connected together (either in a star topology or daisy-chained) to allow more devices to be managed from a single host computer simultaneously.

Each PowerPad15S needs to be connected to mains power individually and the first PowerPad15S in the chain should be connected to the local computer through the PowerPad15S' host port.


Five additional PowerPad15S can be attached to the downstream USB ports of the first PowerPad15S by their host ports as shown in the graphic across.

This star topology allows you to connect up to 85 devices for charging and syncing from a single computer.

Alternatively, a simpler daisy-chain arrangement can be used for connecting five PowerPad15S hubs, allowing 71 devices to be managed from a single host computer.

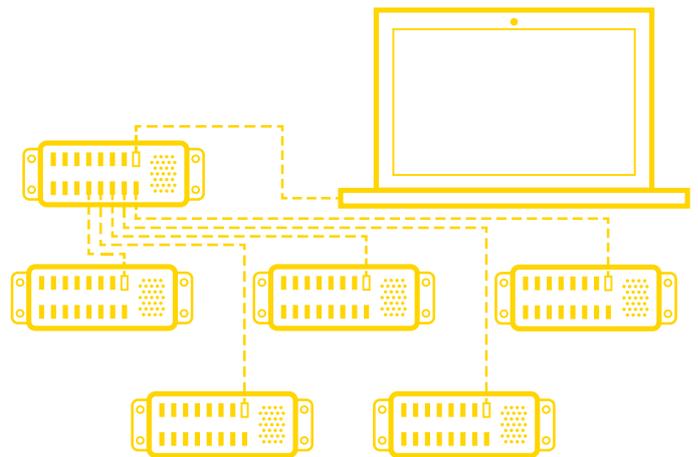

Star topology

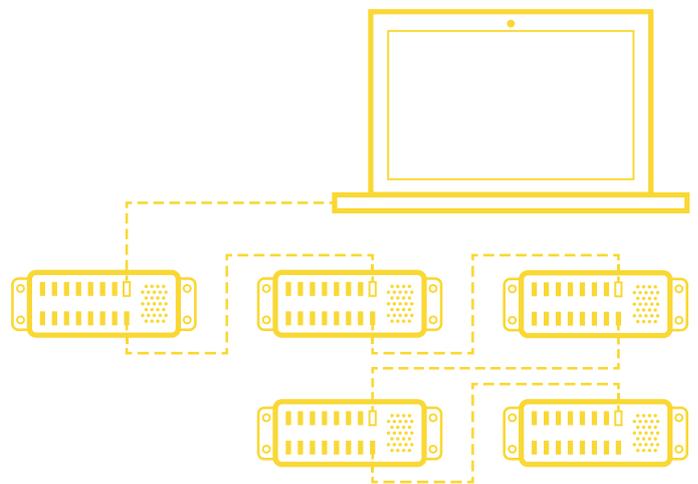

Daisy-chain

## 5 Manage Ports & Devices using Cambrionix Software

---

### More productivity, saving you time.

Cambrionix provides three interfaces by which the PowerPad15S can be monitored and managed:

- [LiveViewer](#)
- [Cambrionix API](#)
- [Command Line Instructions](#)

### 5.1 LiveViewer

LiveViewer is an App that can be downloaded from <https://hub.cambrionix.com>. Once downloaded and installed on the host computer, LiveViewer allows you to switch the ports on and off, set the port to charge only, or to sync mode.

LiveViewer's home page shows the following information about all the ports:

- **Status (attached/disconnected)**
- **Mode (Charge/Sync/Off)**
- **Profile (Charging profile)**
- **Duration (how long the device has been attached)**
- **End time (time the battery reaches a threshold (full) level)**
- **Current (instantaneous charge current in mA)**
- **Energy (present energy rate in Wh)**

Tick boxes adjacent to each port symbol allow that port mode to be changed. When the port is in Sync mode, only instantaneous current can be monitored through LiveViewer. When the port is in Charge mode, the charge profile, instantaneous current, energy rate, duration of charge and end time are displayed.

In addition to individual port information and control, LiveViewer displays the PowerPad15S rail voltages, time since switched on, total instantaneous current and power, and temperature.

Full instructions on LiveViewer are available on our website.

## 5.2 Command Line Instructions (CLI)

Command Line Instructions can also be used to control and monitor the functions of the PowerPad15S and attached devices over a VCP (Virtual COM Port). In order to use the command line interface a serial terminal emulator must be installed on the host computer.

Examples include Serial, ZTerm, PuTTY, and Minicom. Once you have installed your preferred terminal emulator, please connect to the device COM port using 115,200 baud, 8 data bits, No Parity, 1 Stop Bit. Once you get a command prompt, type “help” for a list of commands. An example selection is shown below, with more commands available on our website.

Command	Action
mode <m> [p]	Set mode <m> for port [p] or all ports
mode c <p> [cp]	Set charge mode for a port <p> with optional profile [cp] to enter immediately
state [p]	Show state for port [p] or all ports
system	Show hardware and firmware information
health	Show voltages, temperature, errors and boot flag
cef	Clear error flags
sef [flags]...	Set error flags
crf	Clear rebooted flag
limits	Show voltage and temperature limits
list_profiles	List all profiles on system
en_profile <i> <1 0>	Enable (1) or disable (0) profile <i>
set_profiles <p> [!]	Set profiles <l> associated with port <p>
get_profiles <p>	List profiles associated with port <p>
sec [arm disarm]	Set or reveal security mode
host [auto manual]	Show if USB host is present, and set mode change
id	Show id string
bd	Board description
logc <s>	Report mA for each port every <s> seconds
loge [s]	Report state for all ports every [s] seconds and events as they occur
l	Live view (periodically updated screen showing system state)
remote [exit kexit]	Enter or exit mode where console is controlled by terminal
ledb <p> <row> <ptn>	Set individual LED on row <row>, port <p> to flash bit pattern <ptn>
leds <row> [ptnstr]	Set flash pattern of a string of LEDs on row <row> to string <ptnstr>
keys	Read key click event flags
lcd <row> <col> <str>	Write string <s> to LCD at row <row>, column <col>
clcd	Clear LCD
beep [ms]	Make console beep for [ms] milliseconds
cls	Clear terminal screen
reboot [watchdog]	Reboot (optionally by using watchdog timeout)
serial_speed [test fast slow]	Change serial interface speed
set_delays	Change internal delays
host [auto/manual/charge/sync/off]	Show if USB host is present, and set mode change

NOTES:	
[p] is port number.	Range 1...16. Omit for ‘all’
<m> is port mode:	c=Charge, s=Sync, o=Off, b=Biassed
<l> is a list of profile IDs.	Blank to use all profiles.
<i> is a single profile ID.	
Parameters:	Optional parameters are shown in [ ]. Compulsory in < >.
Tab key	Re-runs previous command.
Cursor up	recalls last command.

Typing “l” will give equivalent information to LiveViewer and, using the command “logc X”, will output the data to the terminal window every “X” seconds, which can then be copied into another

file if required. To return to the prompt at any time, please type “q”.

For further advice and information on using CLI, please visit our website.

### 5.3 **Cambrionix API**

Cambrionix API allows you to monitor and control each port in more detail and to integrate these functions into your own workflow processes. The API comprises a daemon that can be downloaded from <https://hub.cambrionix.com> and installed on the host machine. Port information and control can be provided through the API using JavaScript

Object Notation (JSON) Remote Procedure Calls (RPC) over TCP. JSON-RPC calls send a request to the API to “Get” port, device or PowerPad15S information, or “Set” port functions (such as mode). A library of sample Python code can be obtained from our website to help you integrate many of these functions into your process workflow alongside the full User Guide.

## 6 **Advanced Usage**

---

### 6.1 **Updating the PowerPad15S firmware**

From time to time Cambrionix updates the PowerPad15S firmware to ensure the device incorporates the latest features. In order to update the firmware on your PowerPad15S, please download the Cambrionix Updater and latest firmware file version appropriate for your host computer Operating System from <https://hub.cambrionix.com>.

Please follow these instructions to ensure your PowerPad15S has the latest version of the firmware installed.

#### 6.1.1 **Update procedure for MacOS**

Locate and double-click the Cambrionix Updater application file (which has a .dmg file extension) downloaded from our website, then follow the instructions in 6.1.3 below:

#### 6.1.2 **Update procedure for Windows**

Locate and double-click the Cambrionix Updater application file (which has a .zip file extension) downloaded from our website. Right-click the .zip file and choose ‘Open with ‘Windows Explorer’ to show the contents of the compressed file. Double-click the .exe file within the compressed file to run the application and follow the below instructions:

#### 6.1.3 **Running Updater Instructions**

**MacOS:** Double-click the Cambrionix Updater file and drag into your applications folder.

**Windows:** Double-click the Cambrionix Updater.

This will open the Cambrionix Updater window.

Click ‘Scan’ to list the Cambrionix products connected to your computer.

Click ‘File...’ to open a Finder/Explore window to allow you to navigate to and select the firmware file (which has a .enfir extension) previously downloaded.

The Cambrionix Updater window will now show one or more Cambrionix products as well as the firmware file selected to update the product(s). Please ensure each Update box is ticked for all products requiring updates.

Press ‘Go’ once all the products to update have been selected.

Please Note: The ‘Reboot’ checkbox should remain checked. This will reboot the Cambrionix product once the programming is successful.

## 7 Specifications

---

### PowerPad15S

<b>Input Voltage:</b>	12Vdc
<b>Input Current:</b>	15A
<b>Input Connection:</b>	4-pin DIN
<b>Output Voltage:</b>	5.2V
<b>Output Current:</b>	2.1A Max per Port
<b>Output Power:</b>	10W Max per Port
<b>Output Power (Total):</b>	163.8W Maximum

<b>Input/Output Connectors:</b>	16 x USB Type-A, 1 x 4-pin DIN
<b>Ambient Operating Temperature Range:</b>	0 ~ 35°C
<b>Relative humidity:</b>	5% to 95% non-condensing
<b>Dimensions (approx.):</b>	198.4 long x 73 wide x 40 high mm
<b>Approximate weight:</b>	1.6 kg (inc PSU)

### Power Supply

<b>Input Voltage:</b>	100-250Vdc
<b>Input Current:</b>	2.5A @ 115 Vac
<b>Input Frequency:</b>	50-60Hz
<b>Input Connector:</b>	C14
<b>Output Voltage:</b>	12Vdc
<b>Output Current:</b>	15A
<b>Output Power:</b>	180W
<b>Output Connector:</b>	4-pin DIN

## 8 Certifications

---

- Independently safety tested by the Underwriters Laboratory (UL) under file #E346549
- CE Tested and marked
- CB Certificate
- FCC Part 15 Tested and marked
- RoHS Compliant
- China CCC certification
- Japanese PSE certification (pending)
- Complies with the latest EN60950 safety requirements for ITE
- Housed within a UL94-V0 specification fire enclosure

## 9 Safety Guidelines and Precautions

---

### Please read and understand these guidelines prior to installation or use.

The PowerPad15S has ESD, over-voltage, over-current and over-temperature protection. However, to use the equipment safely you should follow all local regulations relating to the use of electrical equipment and note that:

- Failure to install and operate the equipment in accordance with all local and these safety guidelines may result in unit failure, electrical shock and personal injury.
- The plug on the power cord is considered the “disconnect device” and consequently the mains outlet should be located near the hub, easily accessible in case the power supply needs to be isolated from the mains power.
- If there is a liquid spillage over a ventilation slot, external data/power connector or product aperture, remove power from the unit without contacting the liquid immediately.

## Important Electrical and Safety Messages

Safety warning	Potential consequence if ignored
Do not modify the product in any way.	Fire, electric shock or personal injury may occur.
Do not dismantle the product.	Fire, electric shock or personal injury may occur.
Do not bend, compress or drill into any part of the product.	Damage, electric shock or personal injury may occur.
Parts of Cambrionix products may become hot during operation. Do not obstruct air vents on the product or operate the product in an environment where the ambient temperature is outside the recommended operating temperature region.	An increased internal temperature may cause a fire.
Cambrionix products are not reverse-polarity protected. The power connections MUST be connected correctly. If in doubt, please contact Cambrionix.	Damage to your Cambrionix product may occur. A fire or electric shock may result.
Do not short circuit the Power Supply Unit (PSU) supplied with your Cambrionix product.	Sparks, fire or electric shock may result.
Ensure dust does not collect around the power plug pins or power socket, or in or around the air vents to the extent it causes a reduction in air circulation.	A fire may result if there is combustible material within the power socket or around the power plug, or if the internal temperature increases due to lack of air circulation.
Do not allow liquids to come into contact with the unit or power supply.	Fire, electric shock or personal injury may occur.
Keep the mains power socket (where the power cord is connected) unobstructed.	The power cord must be disconnected to cut off power to the product when an issue occurs. Note that the product may not be completely powered down by only using the power switch on the product.
Do not use a damaged power cord or plug, or a loose power socket.	An electric shock or fire may result.
Do not power multiple products from a single power socket.	Overheated power sockets may cause a fire.
Do not touch the power plug with wet hands.	An electric shock may result.
Insert the power plug all the way into the socket so that it is not loose.	An unsecured connection may cause a fire.
Connect the power plug to an earthed socket.	Failure to connect use an earthed socket may result in an electric shock or injury.
Do not bend or pull the power cord with force. Be careful not to leave the power cord underneath a heavy object.	Damage to the power cord may result in fire or electric shock.
Do not place the power cord near heat sources.	A fire or electric shock may result.
Only use the power cord provided (if applicable).	A fire or electric shock may result.
Only use the power supply provided with the product (if applicable).	A fire or electric shock may result.
Do not disconnect the power cord while the product is being used.	The product may become damaged by electric shock.
Cambrionix OEM modules are susceptible to Electrostatic Discharge (ESD). OEM modules should be handled in an ESD safe area.	Damage to your Cambrionix OEM module may occur.
There are sharp edges, corners and components. Suitable protective equipment must be worn during handling of Cambrionix OEM modules.	Personal injury may occur.
No power supply is shipped with a Cambrionix OEM module. Please contact your power supply manufacturer directly for safety related information.	Fire, electric shock or personal injury may occur. Please see the installation instructions for your Cambrionix product for correct wiring requirements.
When mounting a Cambrionix OEM module, all mounting holes should be used with appropriate spacers, screws and a torque level of 1.1Nm.	Damage or personal injury may occur.



**This product can expose you to chemicals, including Nickel, which is known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, go to [www.p65Warnings.ca.gov](http://www.p65Warnings.ca.gov)**

**If in any doubt about how to correctly operate or maintain your Cambrionix system product or OEM module, or if any part of this safety document is unclear or confusing, please do not use your product and contact Cambrionix before proceeding further.**





**Cambrionix Ltd**

St Johns Innovation Centre  
Cowley Road  
Cambridge CB4 0WS  
United Kingdom

**T +44 (0) 1223 755 520**

**E [enquiries@cambrionix.com](mailto:enquiries@cambrionix.com)**

**W [www.cambrionix.com](http://www.cambrionix.com)**